





## **User's Guide**

M/GE-PSW-SX-01, M/GE-PSW-LX-01 Stand-Alone Media Converters

- Copper to Fiber
- 10/100/1000Base-T to 1000Base-X

The miniature plug-and-play M/GE-PSW-xX-01, 2-port Ethernet/Fast Ethernet bridging media converters allow integrating fiber optic cable to

10/100/1000 Unshielded Twisted Pair (UTP) environments while providing a space-saving alternative to traditional sized media converters.

### M/GE-PSW-xX-01: Auto-Negotiation, AutoCross, Far End Fault (FEF)

Part Number	Copper - Port 10/100/1000Base-T	Fiber-Optic -Port 1000Base-FX
M/GE-PSW-SX-01 (SC)	RJ-45	SX, 850 nm, multimode 62.5/125
	100 m <i>(328 ft)</i> *	200m (722 ft), 50/125 550m (1,805 ft)
M/GE-PSW-LX-01 (SC)	RJ-45	LX, 1310 nm single mode
	100 m (328 ft)*	10 km <i>(2.1 miles)</i> *


<sup>\*</sup>Typical maximum cable distance; actual distance is dependent upon the physical characteristics of the network.

Installation
Operation
Cable Specifications
Technical Specifications
Troubleshooting12
Contact Us
Declaration of Conformity 14
Compliance Information
·

## **Installation**

## **Copper and fiber ports**

The illustration below shows the front panel of the M/GE-PSW-xX-01 media converters.

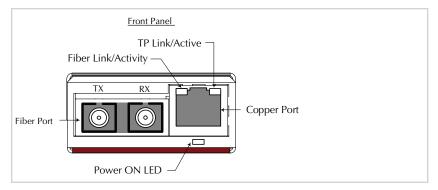

## **Electrostatic Discharge (ESD)**

Always observe the following ESD precautions when installing or handing the M/GE-PSW-xX-01 media converter:


- Do not remove the converter from its protective packaging until you are ready to install it.
- Wear an ESD wrist grounding strap before handling any module or component. If you do not have a wrist strap, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.

## Installation -- Continued

## **Connect the fiber cable**

Full duplex (always ON) is on the fiber side only; therefore, the 512-Bit Rule does not apply. The cable lengths are constrained by the cable requirement.

- Locate or build IEEE 803.2<sup>TM</sup> compliant 1000Base-X fiber cable with male, two-stranded TX to RX connectors installed at both ends.
- 2. Connect the fiber cable to the M/GE-PSW-xX-01 media converters as follows:
- Connect the male TX cable connector to the female TX port.
- Connect the male RX cable connector to the female RX port.
- 3. Connect the fiber cable to the other device (another media converter, hub, etc.) as follows:
- Connect the male TX cable connector to the female RX port.
- Connect the male RX cable connector to the female TX port.

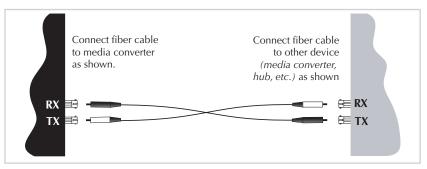

**Note**: With AutoCross permanently enabled, the link LED only lights when a valid end-to-end connection is made.


2

## **Installation -- Continued**

## Connect the twisted-pair copper cable

The AutoCross feature allows either MDI (*straight-through*) or MDI-X (*crossover*) cable connections to be configured automatically, according to network conditions.

- Locate or build IEEE 803.2<sup>TM</sup> compliant 10/100/1000Base-T cables with RJ-45 connectors installed at both ends.
- Connect the RJ-45 connector at one end of the cable to the RJ-45 port on the M/GE-PSW-xX-01 media converter.
- 3. Connect the RJ-45 connector at the other end of the cable to the RJ-45 port on the other device (switch, workstation, etc.).

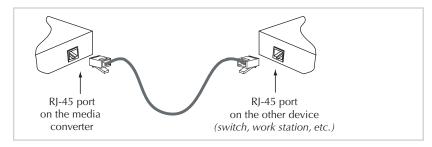


Note: With AutoCross permanently enabled, the link LED only lights when a valid end-to-end connection is made.

## **Installation -- Continued**

## **Powering the media converter**

The M/GE-PSW-xX-01 media converter is powered by using a DC power adapter through the barrel connector on its rear panel, as shown below.

#### M/GE-PSW-xX-01 Back Panel Power

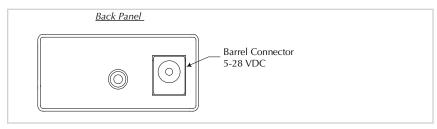

## **Power adapter**

### **AC** power

- 1. Connect the barrel connector of the power adapter to the media converter's power port (located on the back panel of the media converter).
- 2. Connect the power adapter plug to AC power.
- 3. Verify that the media converter is powered up by observing the illuminated LED power indicator light on the front panel.


## **DC** power

Consult the user's guide for the Transition Networks SPS-1872-SA DC external power supply for powering the media converter.

## **Operation**

#### **Status LEDs**

Use the LEDs to monitor the status of the media converter.

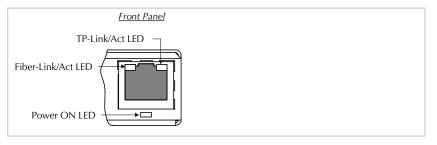

#### LED states are as follows:

#### Fiber-Link/Act LED

Green ON = Link (fiber)

Flashing = Activity

#### TP-Link/Act LED

Green ON = Link (copper)

Flashing = Activity

Power LED

Green ON = Connected to power

## **Operation -- Continued**

### Product features

### **Congestion reduction**

The M/GE-PSW-xX-01 media converters do not forward collision signals or error packets from one collision domain to another, resulting in improvements in baseline network performance. In addition, the media converter filters packets destined for local devices, which reduces network congestion also.

### **Auto-Negotiation**

The Auto-Negotiation feature is ON permanently for the M/GE-PSW-xX-01 media converters. Auto-Negotiation allows the media converter to configure itself automatically to achieve the best possible mode of operation over a link. It broadcasts speed (10 /100/1000 Mb/s) and duplex capabilities (full or half) to the other device and negotiates the best mode of operation. Auto-Negotiation allows quick and easy installation because the optimal link is established automatically.


In a scenario where an auto-negotiation device is linked to a non-negotiating device, the negotiating device via parallel detection recognizes the speed of that second device then establishes the best operating speed (10/100/100Mbs) at half-duplex.

#### **AutoCross**<sup>TM</sup>

The AutoCross feature allows using either straight-through (MDI) or crossover (MDI-X) copper cables when connecting to 10Base-T or 100Base-TX devices. AutoCross determines the characteristics of the connection and automatically configures the device to link up, regardless of the copper cable configuration, MDI or MDI-X.

## **Link Pass-Through**

The Link Pass-Through feature (*illustrated below*) allows the media converter to monitor both the fiber and copper RX (*receive*) ports for loss of signal. In the event of an RX signal loss (1), the media converter will automatically disable the TX (*transmit*) signal (2), thus "passing through" the link loss (3). The far-end device is automatically notified of the link loss (4), which prevents the loss of valuable data unknowingly transmitted over an invalid link.

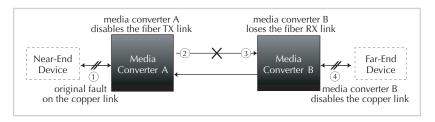

**Note:** Both copper and fiber cables must be installed before the LEDs will light.

## **Operation -- Continued**

### Product features -- continued

#### Automatic link restoration

The media converter will automatically re-establish the link when connected to switches if the link is lost, even with Auto-Negotiation and Link Pass-through *(both directions)* enabled.

### **Full-Duplex flow control**

In a full-duplex network, maximum cable lengths are determined by the type of cables used—see page 1 (front cover) for M/GE-PSW-xX-01 cable specifications.

The 512-Bit Rule does not apply in a full-duplex network.

**Note:** Full duplex is ON permanently for the fiber port only.

## Half-Duplex flow control (512-Bit Rule)

In a half-duplex network, the maximum cable lengths are determined by the roundtrip delay limitations of each Fast Ethernet collision domain. (A collision domain is the longest path between any two terminal devices; e.g., a terminal, switch, or router.)

The 512-Bit Rule determines the maximum length of cable permitted by calculating the round-trip delay in bit-times (BT) of a particular collision domain. If the result is less than or equal to 512 BT, the path is good.

For more information on the 512-Bit Rule, see the white paper titled "Collision Domains" on the Transition Networks website at: www.transition.com

### **Back pressure**

Back pressure is used in half duplex mode. It ensures the retransmission of incoming packets when a port using half-duplex is temporarily unable to receive incoming frames.

#### Flow Control

The process of adjusting the flow of data from one device to another ensures that the receiving device can handle all the incoming data. This is particularly important where the sending device is capable of transmitting data much faster than the receiving device can accept it.

## **Operation -- Continued**

### Product features -- continued

#### Distance extension

The M/GE-PSW-xX-01 media converters can segment one (1) 10Base-T copper Ethernet, 100Base-T copper fast Ethernet, or 1000Base-T copper Gigabit Ethernet, and one (1)1000 Base-X fiber Fast Ethernet collision domain:

In a half-duplex Ethernet or Fast Ethernet environment, the M/GE-PSW-xX-01 media converters extend network distances by segmenting collision domains so that the 512-Bit Rule applies separately to each collision domain.

In a full-duplex Ethernet or Fast Ethernet environment, the M/GE-PSW-xX-01 media converters extend network distances to the physical cable limitations imposed by the selected twisted-pair copper fiber cables.

#### Rate conversion

The M/GE-PSW-xX-01 media converters allow the following connections:

- 10Mb/s devices on a 10Base-T legacy copper network to 1000Mb/s devices on a 1000Base SX/LX Gigabit Ethernet fiber network.
- 100Mb/s devices on a 100Base-T legacy copper network to 1000Mb/s devices on a 1000Base SX/LX Gigabit Ethernet fiber network.

## **Cable Specifications**

The physical characteristics must meet or exceed IEEE 802.3<sup>TM</sup> specifications.

### Fiber cable

Bit Error Rate: <10-9 single mode fiber (recommended): 9 µm Multimode fiber (recommended): 62.5/125 µm

Multimode fiber *(optional)*: 100/140, 85/140, 50/125 μm

M/GE-PSW-SX-01 (SC) 850nm multimode

Fiber Optic Transmitter Power: min: -10.0 dBm max: -4.0 dBm Fiber Optic Receiver Sensitivity: min: -17.0 dBm max: -0.0 dBm

Link Budget: 7.0 dB

M/GE-PSW-LX-01 (SC) 1310 nm single mode

Fiber-optic Transmitter Power: min: -9.5 dBm max: -3.0 dBm Fiber-optic Receiver Sensitivity: min: -20.0 dBm max: -3.0 dBm

Link Budget: 10.5 dB

The fiber optic transmitters on this device meet Class I Laser safety requirements per IEC-825/CDRH standards and comply with 21 CFR1040.10 and 21CFR1040.11.

## **Copper cable**

### Category 5 and Category 5e: minimum requirement


Gauge 24 to 22 AWG

Attenuation 22.0 dB /100m @ 100 MHz

Maximum Cable Distance 100 meters

• Straight-through or crossover twisted-pair cable may be used.

- Shielded (STP) or unshielded (UTP) twisted-pair cable may be used.
- Pins 1&2 and 3&6 are the two active pairs in an Ethernet network.
- All four pairs are used in a gigabit Ethernet network.
- Use only dedicated wire pairs for the active pins: (e.g., blue/white & white/blue, orange/white & white/orange, etc.)
- Do not use flat or silver satin wire.

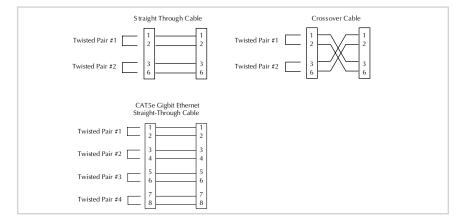

## **Technical Specifications**

For use with Transition Networks Model M/GE-PSW-xX-01 converters.

Standards: IEEE 802.3-2000

Data rate: 10 Mb/s, 100 Mb/s, 1000 Mb/s

Dimensions: 1.8"W x 3.35"D x 0.85"H (45.7 x 85.1 x 21.6 mm)

Weight: 3.15 oz. (127.5 g) approximately

MTBF\*: 24,466 hours (MIL217F2 V5.0) (MIL-HDBD-217F)

100,130 hours (Bellcore 7 V 5.0)

Packet size: Memory: 9256K bytes

MAC addresses: 8K

Maximum packet size: 1632 bytes, untagged

1628 bytes, tagged

Power sources: Unit will accept - 5 to 28 VDC

Barrel connector - Wall Mount AC Adapter

(400mA at 12VDC)(The external power supply provided with this product is UL listed by the power supply's

manufacturer.)

Power consumption: 262mA @ 12VDC, 3.15 watts

Environment: Tmra\*\*: 0°C to 50°C (32°F to 122°F)

Storage Temp: -25°C to 65°C (-13°F to 149°F) Humidity: 5% to 95%, non-condensing

Altitude: 0 to 10,000 feet

Warranty: Lifetime

\*MTBF is estimated using the predictability method. This method is based on MIL-217F at 25°C ambient temperature, typical enclosure heat rise of 10°C with nominal operating conditions and parameters. Installation and configuration specific MTBF estimates are available upon request. Contact Technical Support.

<u>CAUTION:</u> Copper based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are intended to be connected to intrabuilding (*inside plant*) link segments that are not subject to lightening transients or power faults. Copper-based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are NOT to be connected to interbuilding (*outside plant*) link segments that are subject to lightening transients or power faults. Failure to observe this caution could result in damage to equipment.

<sup>\*\*</sup>Manufacturer's rated ambient temperature.

## **Technical Specifications -- Continued**

Copper-based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are intended to be connected to intra-building (inside plant) link segments that are not subject to lightening transients or power faults. Copper based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are NOT to be connected to interbuilding (outside plant) link segments that are subject to lightening transients or power faults.

The product is certified by the manufacturer to comply with DHHS Rule 21/CFR, Subchapter J applicable at the date of manufacture.

<u>WARNING:</u> Visible and invisible laser radiation when open. Do not stare into the beam or view directly with optical instruments. Failure to observe this warning could result in an eye injury or blindness.

<u>WARNING</u>: Use of controls, adjustments, or the performance of procedures other than those specified herein could result in hazardous radiation exposure.

The information in this user's guide is subject to change. For the most up-to-date information, view the user's guide on-line at: www.transition.com.

## **Troubleshooting**

If the media converter fails, isolate and correct the failure by determining the answers to the following questions and then taking the indicated action:

 Is the power LED illuminated and did the TX and FX LEDs turn ON then turn OFF?

NO

Is the power adapter the proper type of voltage and cycle frequency for the AC outlet?

- Is the power adapter properly installed in the media converter and in the outlet?
- Contact Technical Support: US/Canada: 1-800-260-1312, International: 00-1-952-941-7600.

#### YES

Proceed to step 2.

#### Note the following:

- As a link pass-through device both copper and fiber cables must be installed before the LEDs will light.
- Are the "TX and FX-Link/ACT" LEDs illuminated on the RJ-45 port?
  - Check the copper cables for proper connection.
  - Check the fiber cables for proper connection.
  - Contact Technical Support: US/Canada: 1-800-260-1312, International: 00-1-952-941-7600.

#### YES

 Contact Technical Support: US/Canada: 1-800-260-1312, International: 00-1-952-941-7600.

## **Contact Us**

### **Technical Support**

Technical support is available 24 hours a day. US and Canada: 1-800-260-1312 International: 00-1-952-941-7600

#### **Transition Now**

Chat live via the Web with Transition Networks Technical Support. Log onto www.transition.com and click the Transition Now link.

#### **Web-Based Seminars**

Transition Networks provides seminars via live web-based training. Log onto www.transition.com and click the Learning Center link.

#### E-Mail

Ask a question anytime by sending an e-mail to our technical support staff. techsupport@transition.com

#### Address

Transition Networks 10900 Red Circle Drive Minnetonka MN 55343, U.S.A.

telephone: 952-941-7600 toll free: 800-526-9267 fax: 952-941-2322

# **Declaration of Conformity**



#### **Declaration of Conformity**

Name of Mfg: Transition Networks

10900 Red Circle Drive, MinnetonkaMN 55343 U.S.A.

Model: M/GE-PSW-xX-01 Series Media Converters M/GE-PSW-LX-01 and M/GE-PSW-SX-01 Part Number(s):

Regulation: EMC Directive 89/336/EEC

Purpose: To declare that the M/GE-PSW-xX-01 to which this declaration refers is in conformity with the following standards.

EN 55022:1994 + A1:1995 + A2:1997; EN 55024:1998 + A1:2001 + A2:2003

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Stategarden Smitherman Stephen Anderson, Vice President of Engineering

14

January, 2008

## **Compliance Information**

#### CE Mark

#### FCC Regulations

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

#### **Canadian Regulations**

This digital apparatus does not exceed the Class A limits for radio noise for digital apparatus set out on the radio interference regulations of the Canadian Department of Communications. Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

### **European Regulations**

Warning This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten. In diesem Fäll ist der Benutzer für Gegenmaßnahmen verantwortlich.

Attention! Ceci est un produit de Classe A. Dans un environment domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilsateur de prende les measures spécifiques appropriées.



In accordance with European Union Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003, Transition Networks will accept post usage returns of this product for proper disposal. The contact information for this activity can be found in the 'Contact Us' portion of this document.



CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.

Der Anschluss dieses Gerätes an ein öffentlickes Telekommunikationsnetz in den EG-Mitgliedstaaten verstösst gegen die jeweligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.

## **Trademark Notice**

All trademarks and registered trademarks are the property of their respective owners.

**Copyright Restrictions** © 2001-2005 Transition Networks.

All rights reserved. No part of this work may be reproduced or used in any form or by any means—graphic, electronic, or mechanical—without written permission from Transition Networks.

16 Printed in the U.S.A. 33398.A